


Service Manual

MODELS

LA1000 STEREO PREAMPLIFIER

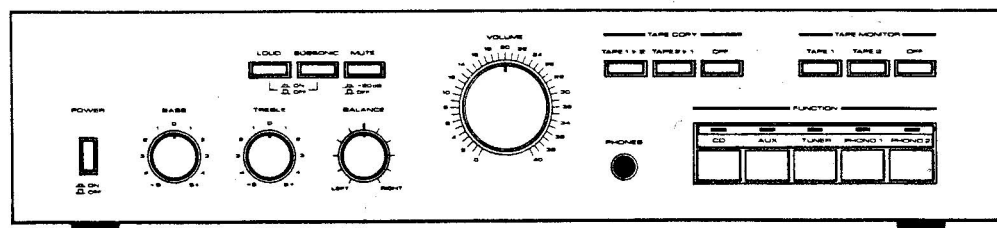

LA 1000 STEREO PREAMPLIFIER

SPECIFICATIONS

Amplifier Section

Continuous Max. Output Voltage is 8 Volts Per Channel, Min., at 47 Kohms from 20Hz to 20kHz with no more than 0.02% total harmonic distortion.

- Input (Sensitivity/Impedance)
 - Phono 1, 2 2.5mV/47K Ω
 - Tuner, Aux, CD, Tape 1, 2 Play 150mV/47K Ω
- Phono Overload Level (T.H.D. 0.05%, 1kHz) 280mV
- Output (Level/Impedance)
 - Tape 1, 2 Rec 150mV/2.2K Ω
- Frequency Response
 - Phono 1, 2 (RIAA Equalization) 20Hz to 20kHz \pm 0.5dB
 - Tuner, Aux, CD, Tape 1, 2 Play 20Hz to 80kHz \pm 3dB
- Tone Control
 - Bass (100Hz) \pm 10dB
 - Treble (10kHz) \pm 10dB
- Loudness Control (Volume Control set at -40dB Position) +6dB (100Hz), +4dB (10kHz)
- Subsonic Filter 15Hz (6dB/Oct)
- Muting -20dB
- Hum & Noise (IHF, Short-Circuited, A Network)
 - Phono 1, 2 88dB
 - Tuner, Aux, CD, Tape 1, 2 Play 100dB

Miscellaneous

Power Requirements AC220V, 50 Hz
 Power Consumption 16W
 Dimensions 420(W) \times 88(H) \times 330(D)mm
 Weight (without package) 4.6kg


Furnished Parts

Operating Instructions 1
 Connection Cord 1

Note:

- Specifications and design subject to possible modification without notice due to improvements.
- Measured pursuant to the Federal Trade Commissions Trade Regulation rule on Power Claims for Amplifier.

FRONT PANNEL FEATURES

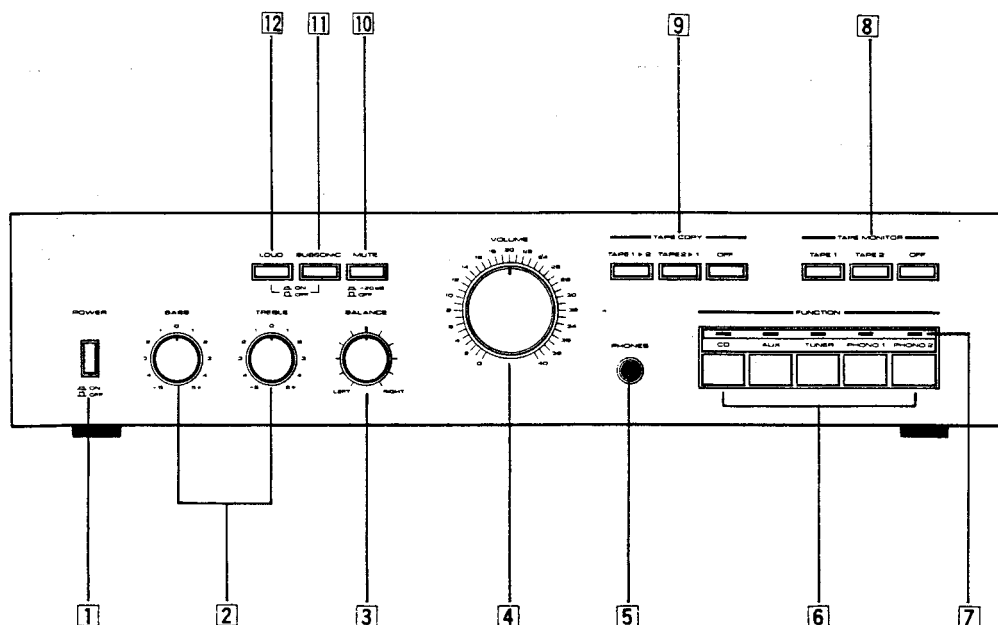

1. POWER SWITCH

Press to on position to turn on the pre-amplifier. Upon power up, a muting circuit presents a short delay in order to suppress the sometimes annoying sound present at switch-on.

2. BASS AND TREBLE CONTROLS

Use these controls to adjust the bass and the treble. If you turn the bass control clockwise from its center position, you will be able to emphasize the sound in the low-frequency range. Conversely, turning the bass control counter clockwise from the center position, you will attenuate the sound.

Use the treble control to adjust the sound in the high-frequency range in the same manner.

3. BALANCE CONTROL

Use this control to balance the volume of the left and right channels.

4. VOLUME CONTROL

Use this control to adjust the output level to the speakers and headphones. Turn it clock wise to increase the output level. No sound will be heard if you set it to "0".

5. HEADPHONE JACK

Plug the headphones into this jack when you want to listen through your stereo headphones.

Be sure to turn down the volume level before plugging in the headphones. Turn up the volume level to a comfortable listening level once the headphones are adjusted.

6. FUNCTION SELECTOR

Use this selector to select the program source. When set, the function indicator above the panel corresponding to the position of the function selector will light up.

- CD : Select when you wish to listen to a Compact Disc Player.
- AUX : Select when listening to a program source which is connected to the AUX jacks.
- TUNER : Select when listening to radio broadcasts from the tuner.
- PHONO 1, 2: Select either Phono 1 or Phono 2 when playing a record on the corresponding turntable.

7. FUNCTION INDICATORS

The CD, AUX, TUNER, PHONO 1, 2 function indicators light up in accordance with the position of the function selector.

8. TAPE MONITOR SWITCH

Use these buttons to select the program source which is being reproduced.

TAPE 1: Select to monitor a recording or a tape being played back on the tape deck which is connected to the TAPE 1 jacks.

TAPE 2: Select to monitor a recording or a tape being played back on the tape deck which is connected to the TAPE 2 jacks.

OFF : Select whenever you are not playing back a tape or monitoring a recording.

9. TAPE COPY SWITCH

Use these switches when using two tape decks to copy recorded tapes or edit tapes. This switch is otherwise kept at the OFF position.

TAPE 1 ▶ 2: When playing back the tape on a deck connected to the TAPE 1 jacks and recording (copying) on a deck connected to the TAPE 2 jacks.

TAPE 2 ▶ 1: When playing back the tape on a deck connected to the TAPE 2 jacks and recording (copying) on a deck connected to the TAPE 1 jacks.

OFF: Set to this position when not copying.

10. MUTE SWITCH

Set this switch to -20dB to attenuate the audio output indicated by the volume control by 20dB.


11. SUBSONIC FILTER SWITCH

When depressed, the subsonic filter (15Hz cut-off) reduces turntable rumble, record warp noise and other ultra low frequency noise.

12. LOUDNESS SWITCH


This compensates for human hearing characteristics by boosting the bass and treble response at low volume listening levels to achieve a more pleasing tone balance.

BLOCK DIAGRAM

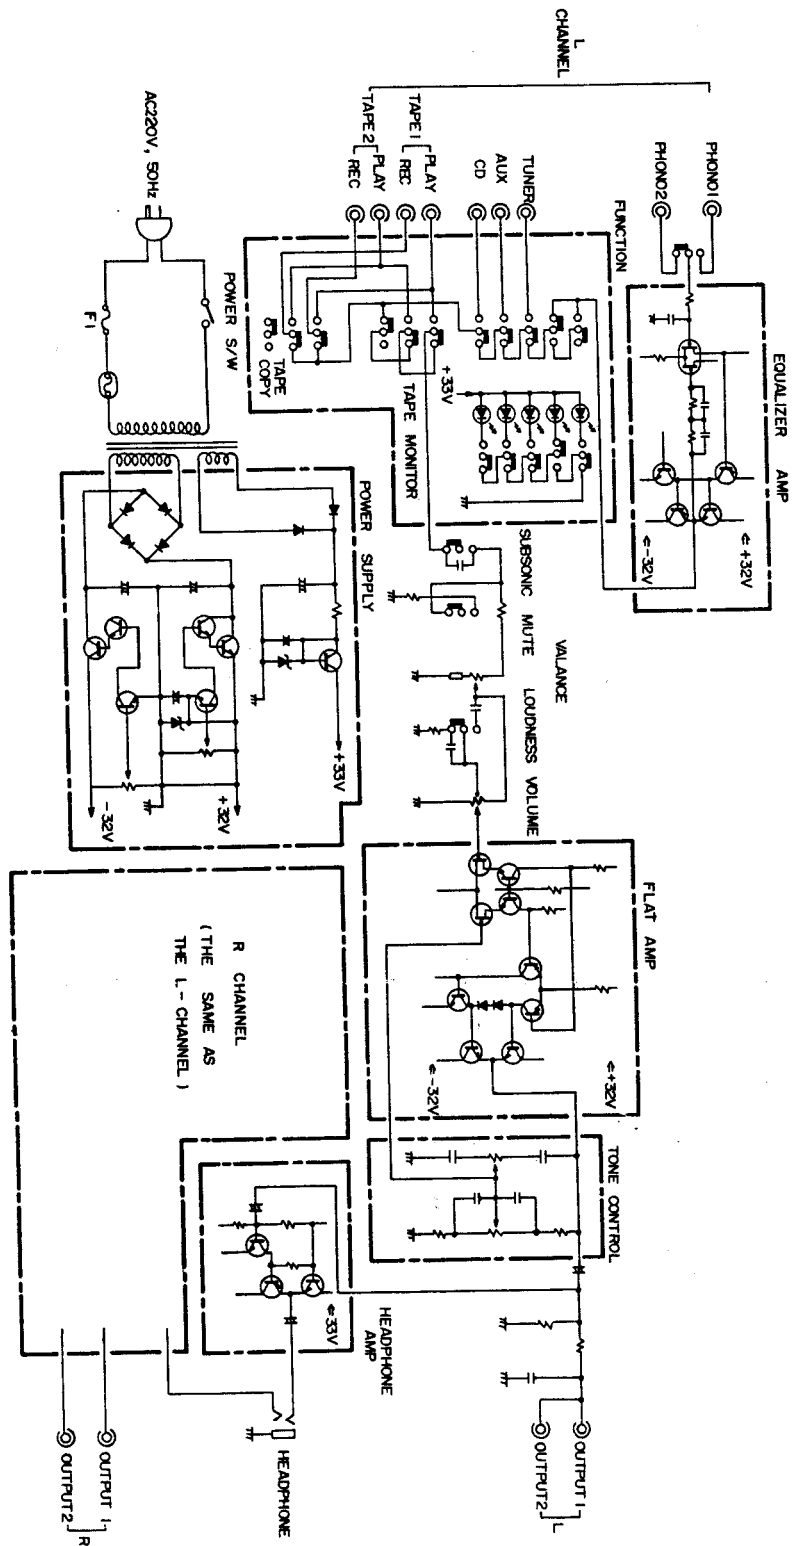




EXPLODED VIEW PARTS LIST

Note:

- Parts without part number cannot be supplied.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks ** and *.
* * GENERALLY MOVES FASTER THAN *
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "O" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Parts List of Exploded View

1. NAC-121	Volume Knob
2. NAC-120	Rotary Knob
3. NNB-122	Front Panel
4. NNW-776	Push Escutcheon
5. NNW-774	Function Knob "A"
6. NNW-777	Power Escutcheon
7. NNW-711	Power Knob
8. NLA-156	Guide Nut
9. NNA-264	Panel Stay
 10. NSG-108-A	Power S/W
11. NNA-175	Side Stay
12. NNA-177	Canter Frame
13. NNW-676	PCB Holder
14. NNF-226	Trans Frame
 15. NTT-146	Power Trans
16. NCC-101	Rear Panel
17. 406-000-009-009	Strain Relief Bushing
 18. NDG-022	AC Power Cord
19. NNE-035	Bonnet Case
20. NKE-005	Ground Terminal
21. NWM-137	Main PCB Ass'y
22. NWM-115	Control PCB Ass'y
23. NNW-775	Function Knob "B"
24. NNW-1074	LED Escutcheon
25. NND-032	Bottom Plate
26. NNW-050	Foot

ADJUSTMENTS

DC Voltage Control


1. Adjust VR401 for 32V (to within $\pm 0.1V$) between terminal No. 3 and ground.
2. Adjust VR402 for -32V (to within $\pm 0.1V$) between terminal No. 4 and ground.

PHONO DC Balance

1. Adjust VR101 (L) for 0V (to within $\pm 0.1V$) between terminal No. 1 and ground.
2. Adjust VR102 (R) for 0V (to within $\pm 0.1V$) between terminal No. 2 and ground.

ELECTRICAL PARTS LIST






Notes:

- When ordering resistors, first convert resistance values into code form as shown in the following examples.
Ex. 1. When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).
 $560\Omega = 56 \times 10^1 \rightarrow 561$ RD1/4 PS561J
 $47\text{ k}\Omega = 47 \times 10^3 \rightarrow 473$ RD1/4 PS473J
 $0.5\Omega \rightarrow 0R5$ RNZH0R5K
 $1\Omega \rightarrow 010$ RS1P010K
 Ex. 2. When there are 3 effective digits (such as in high-precision metal film resistors).
 $5.62\text{ k}\Omega = 562 \times 10^1 \rightarrow 5621$ RN1/4 SR5621K
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- For your Parts Stock Control, the fast moving items are indicated with the marks ** and *.
 **GENERALLY MOVES FASTER THAN*
 This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts marked by "O" are not always kept in stock. Their delivery time may be longer than usual if they may be unavailable.


Miscellaneous Parts List P.C. BOARD ASSEMBLIES





Mark	Symbol & Description	Part No.
	AF Assembly	NWM-137-0
	Control Assembly	NWM-115-0

OTHERS

Mark	Symbol & Description	Part No.
	C423 Power Capacitor (0.01/400WV)	NCG-002-0
	T1 Power transformer	NTT-146-A
	FU1 Fuse	NEK-103-0
	S201 Power Switch	NSG-026-0
	AC Power Cord	NDG-022-0

AF Assembly (NWM-137-0) SEMICONDUCTORS

Mark	Symbol & Description	Part No.
**	Q101, Q102	2SK146GR
**	R201, Q202, Q203, Q204	2SK117GR
**	Q304, Q306, Q307	KTA817A-Y
**	Q107, Q108, Q109, Q110 Q111, Q112, Q209, Q210, Q211, Q212, Q404	KTA970BL
**	Q117, Q118, Q217	KTA970GR
	Q218, Q406	
**	Q405	KTB834Y
**	Q305, Q308, Q309	KTC1627A-Y
**	Q103, Q104, Q105, Q106, Q113, Q114, Q205, Q206, Q207, Q208, Q213, Q214, Q401	KTC2240BL

Mark	Symbol & Description	Part No.
**	Q115, Q116, Q215, Q216, Q403	KTC2250GR
**	Q301, Q302, Q303, Q310, Q311	KTC3199GR
	Q402, Q407	KTD880GR
*	D307 Zener diode	IN959A/B
	D405 Zener diodes	IN966A/B
	D408 Zener diode	IN973A/B
	D308, D401, D404, D406, D407 D101, D102, D210-D206 D306, D308, D310	IN4002 IS2473

RELAYS

Mark	Symbol & Description	Part No.
**	RL 1, RL2	NSR-014-0

CAPACITORS

Mark	Symbol & Description	Part No.
	C302	CEA010M 50L
	C307-C310	CEA100M16L
	C424	CEA100M35L
	C305, C306	CEA101M35L
	C407, C408, C419	CEA101M50L
	C405, C406, C412, C413, 4C418	CEA102M50L
	C311, C312	CEA220M16L
	C304	CEA220M50L
	C109, C110	CEA221M10L

Mark Symbol & Description

C303
C410, C420
C301
C421
C125-C128, C 227, C 228
C121, C122, C225, C226
C107, C108
C209, C210
C105, C106
C123, C124
C119, C120
C113, C114
C211, C212, C213, C214
C103, C104
C101, C102, C207, C208
C229, C230
C115- C118
C111, C112
C401-C404, C409, C411,
C414-C417, C422

Part No.

CEA221M25L
CEA221M35L
CEA3R3M50L
CEA331M35L
CEA470M50L
CEANP4R7M25
CQMA124J50
CQMA152J50
CQMA333J50
CQMA392J50
CQMA472J50
CQMA473J50
CCDSL101J50
CCDSL122J50
CCDSL221J50
CCDSL331J50
CCDSL470J50
CCDSL560J50
CKDYB103K50

RESISTORS

Mark Symbol & Description

VR101, VR102, Semifixed Volume
VR401, VR402, Semifixed Volume
R115, R116
R119, R120
R121, R122
R123, R124
R125, R126
R127, R128
R410
R334, R335 R338, R339
R117, R118
R233, R234, R312
R135-R138, R332, R333
R105, R106, R145, R146, R265
R266, R328, R329
R131, R132
R314, R315
R411, R221, R222
R406, R407

Part No

NCP-034-0
NCP-045-0
RN¼ PM5RIF
RN¼ PM47R5F
RN¼ PM42R2F
RN¼ PM1001F
RN¼ PM1181F
RN¼ PM2672F
RD½ PS100J
RD½ PS222J
RD½ PS272J
RD¼ PM101J
RD¼ PM102J
RD¼ PM104J

R239-R242, R318-R321
R113, R114
R209, R210, R213, R214
R308
R223, R224, R303
R330, R331
R129, R130
R225, R226
R107, R108
R109-R112, R201-R208
R211, R212, R243, R244
R263, R264
R304, R340
R405
R322, R323
R311, R409
R408
R403, R404
R305

RD¼ PM220J
RD¼ PM221J
RD¼ PM222J
RD¼ PM223J
RD¼ PM224J
RD¼ PM242J
RD¼ PM243J
RD¼ PM273J
RD¼ PM303J
RD¼ PM331J

R139-R142, R249-R252
R147, R148
R237, R238, R309
R101, R102, R307
R143, R144
R313, R336, R337
R227, R228, R231, R232, R306
R310
R133, R134
R401, R402
R103, R104
R245-R248
R235, R236
R229, R230
R302

RD¼ PM332J
RD¼ PM333J
RD¼ PM362J
RD¼ PM391J
RD¼ PM392J
RD¼ PM432J
RD¼ PM433J
RD¼ PM434J
RD¼ PM470J
RD¼ PM471J
RD¼ PM472J
RD¼ PM473J
RD¼ PM560J
RD¼ PM563J
RD¼ PM622J
RD¼ PM681J
RD¼ PM752J
RD¼ PM820J
RD¼ PM821J
RD¼ PM822J
RD¼ PM823J
RD¼ PM911J

OTHERS

Mark	Symbol & Description	Part No.
	4P pin jack (OUTPUT)	NKB-003-0
	6P pin jack(PHONO 1, 2 TUNER, AUX, CD, TAPE 1, 2)	NKB-004-0
	JH, Terminal 3P	NKP-028-0
	JC, JE, JF, Terminal 7P	NKP-032-0
	JA, Terminal 8P	NKP-033-0
	JB, JD, Terminal 9P	NKP-034-0
	Jack (PHONE)	NKN-026-0
	Fuse holder	AKR-035-0
	Heat sink	ANH-575-A
	Screw	VBZ30P080FMC
**	P.C.B.	NNP-290-A

Control Assembly

SEMICONDUCTORS

Mark	Symbol & Description	Part No.
**	D310 Zener diode	In967A/B
**	D301-D305 LED	KLR114E

SWITCH

Mark	Symbol & Description	Part No.
**	S1 Push Switch	NSG-082-0
**	S2, S3 Push Switch	NSG-083-0
**	S4 Push Switch	NSG-084-0

RESISTORS

Mark	Symbol & Description	Part No.
**	VR1, Rotary Volume	NCS-072-0
**	VR2, Rotary Volume	NSC-073-0
**	VR3, VR4, Rotary Volume	NCS-074-0
	R257, R258	RD 1/4 PM105J
	R253, R254	RD 1/4 PM222J
	R259, R260	RD 1/4 PM223J
	R261, R262	RD 1/4 PM392J
	R215, R216	RD 1/4 PM473J
	R219, R220	RD 1/4 PM512J
	R217, R218	RD 1/4 PM562J
	R255, R256	RD 1/4 PM821J


CAPACITOR

Mark	Symbol & Description	Part No.
	C223, C224	CEANP100M16
	C205, C206	CQMA124J50
	C219, C220	CQMA153J50
	C217, C218	CQMA183J50
	C201, C202	CQMA224J50
	C215, C216	CQMA332J50
	C221, C222	CQMA 823K50
	C203, C204	CCDSL361J50

OTHERS


Mark	Symbol & Description	Part No.
**	P.C.B.	NNP-291-A
	LED HOLDER	NNW-773-B

PACKING

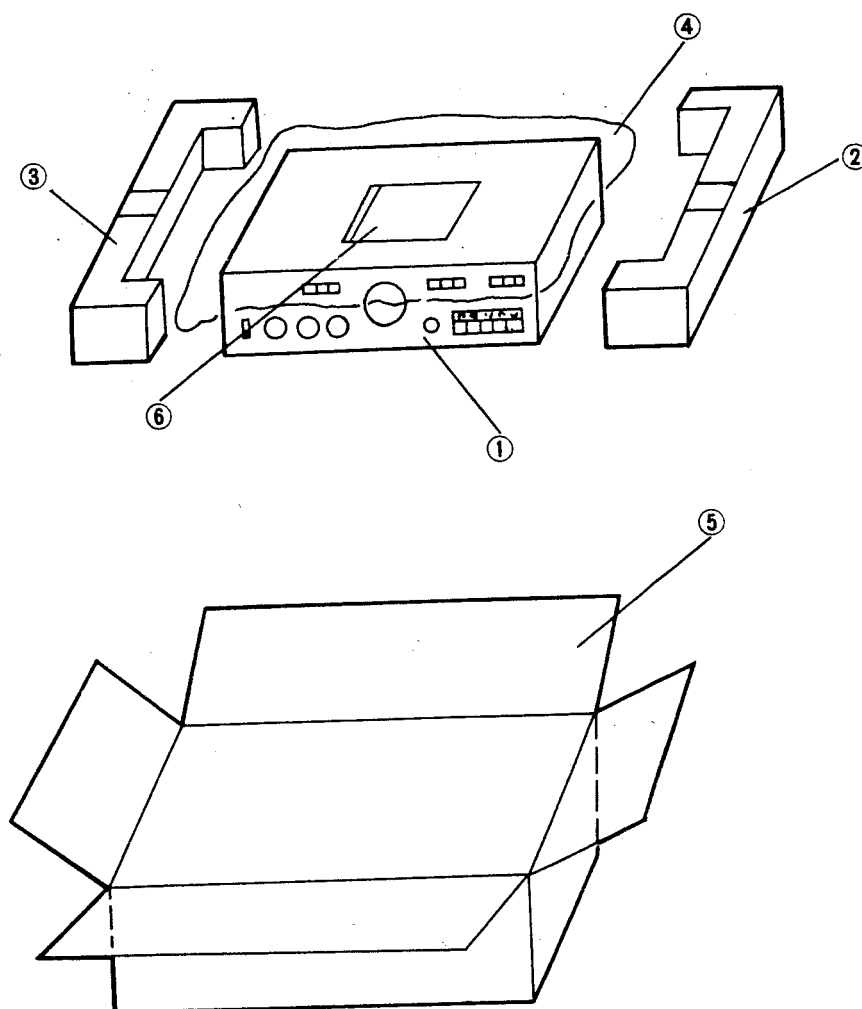


Mark	No.	Part No.	Description
	1		Set
	2	NHA-198-0	Side pad (L)
	3	NHA-198-0	Side pad (R)
	4	NHL-007-0	Poly Sheet
	5	NHG-275-0	Packing Case
	6	NRA-207-0	Instruction Manual

SCHEMATIC DIAGRAM

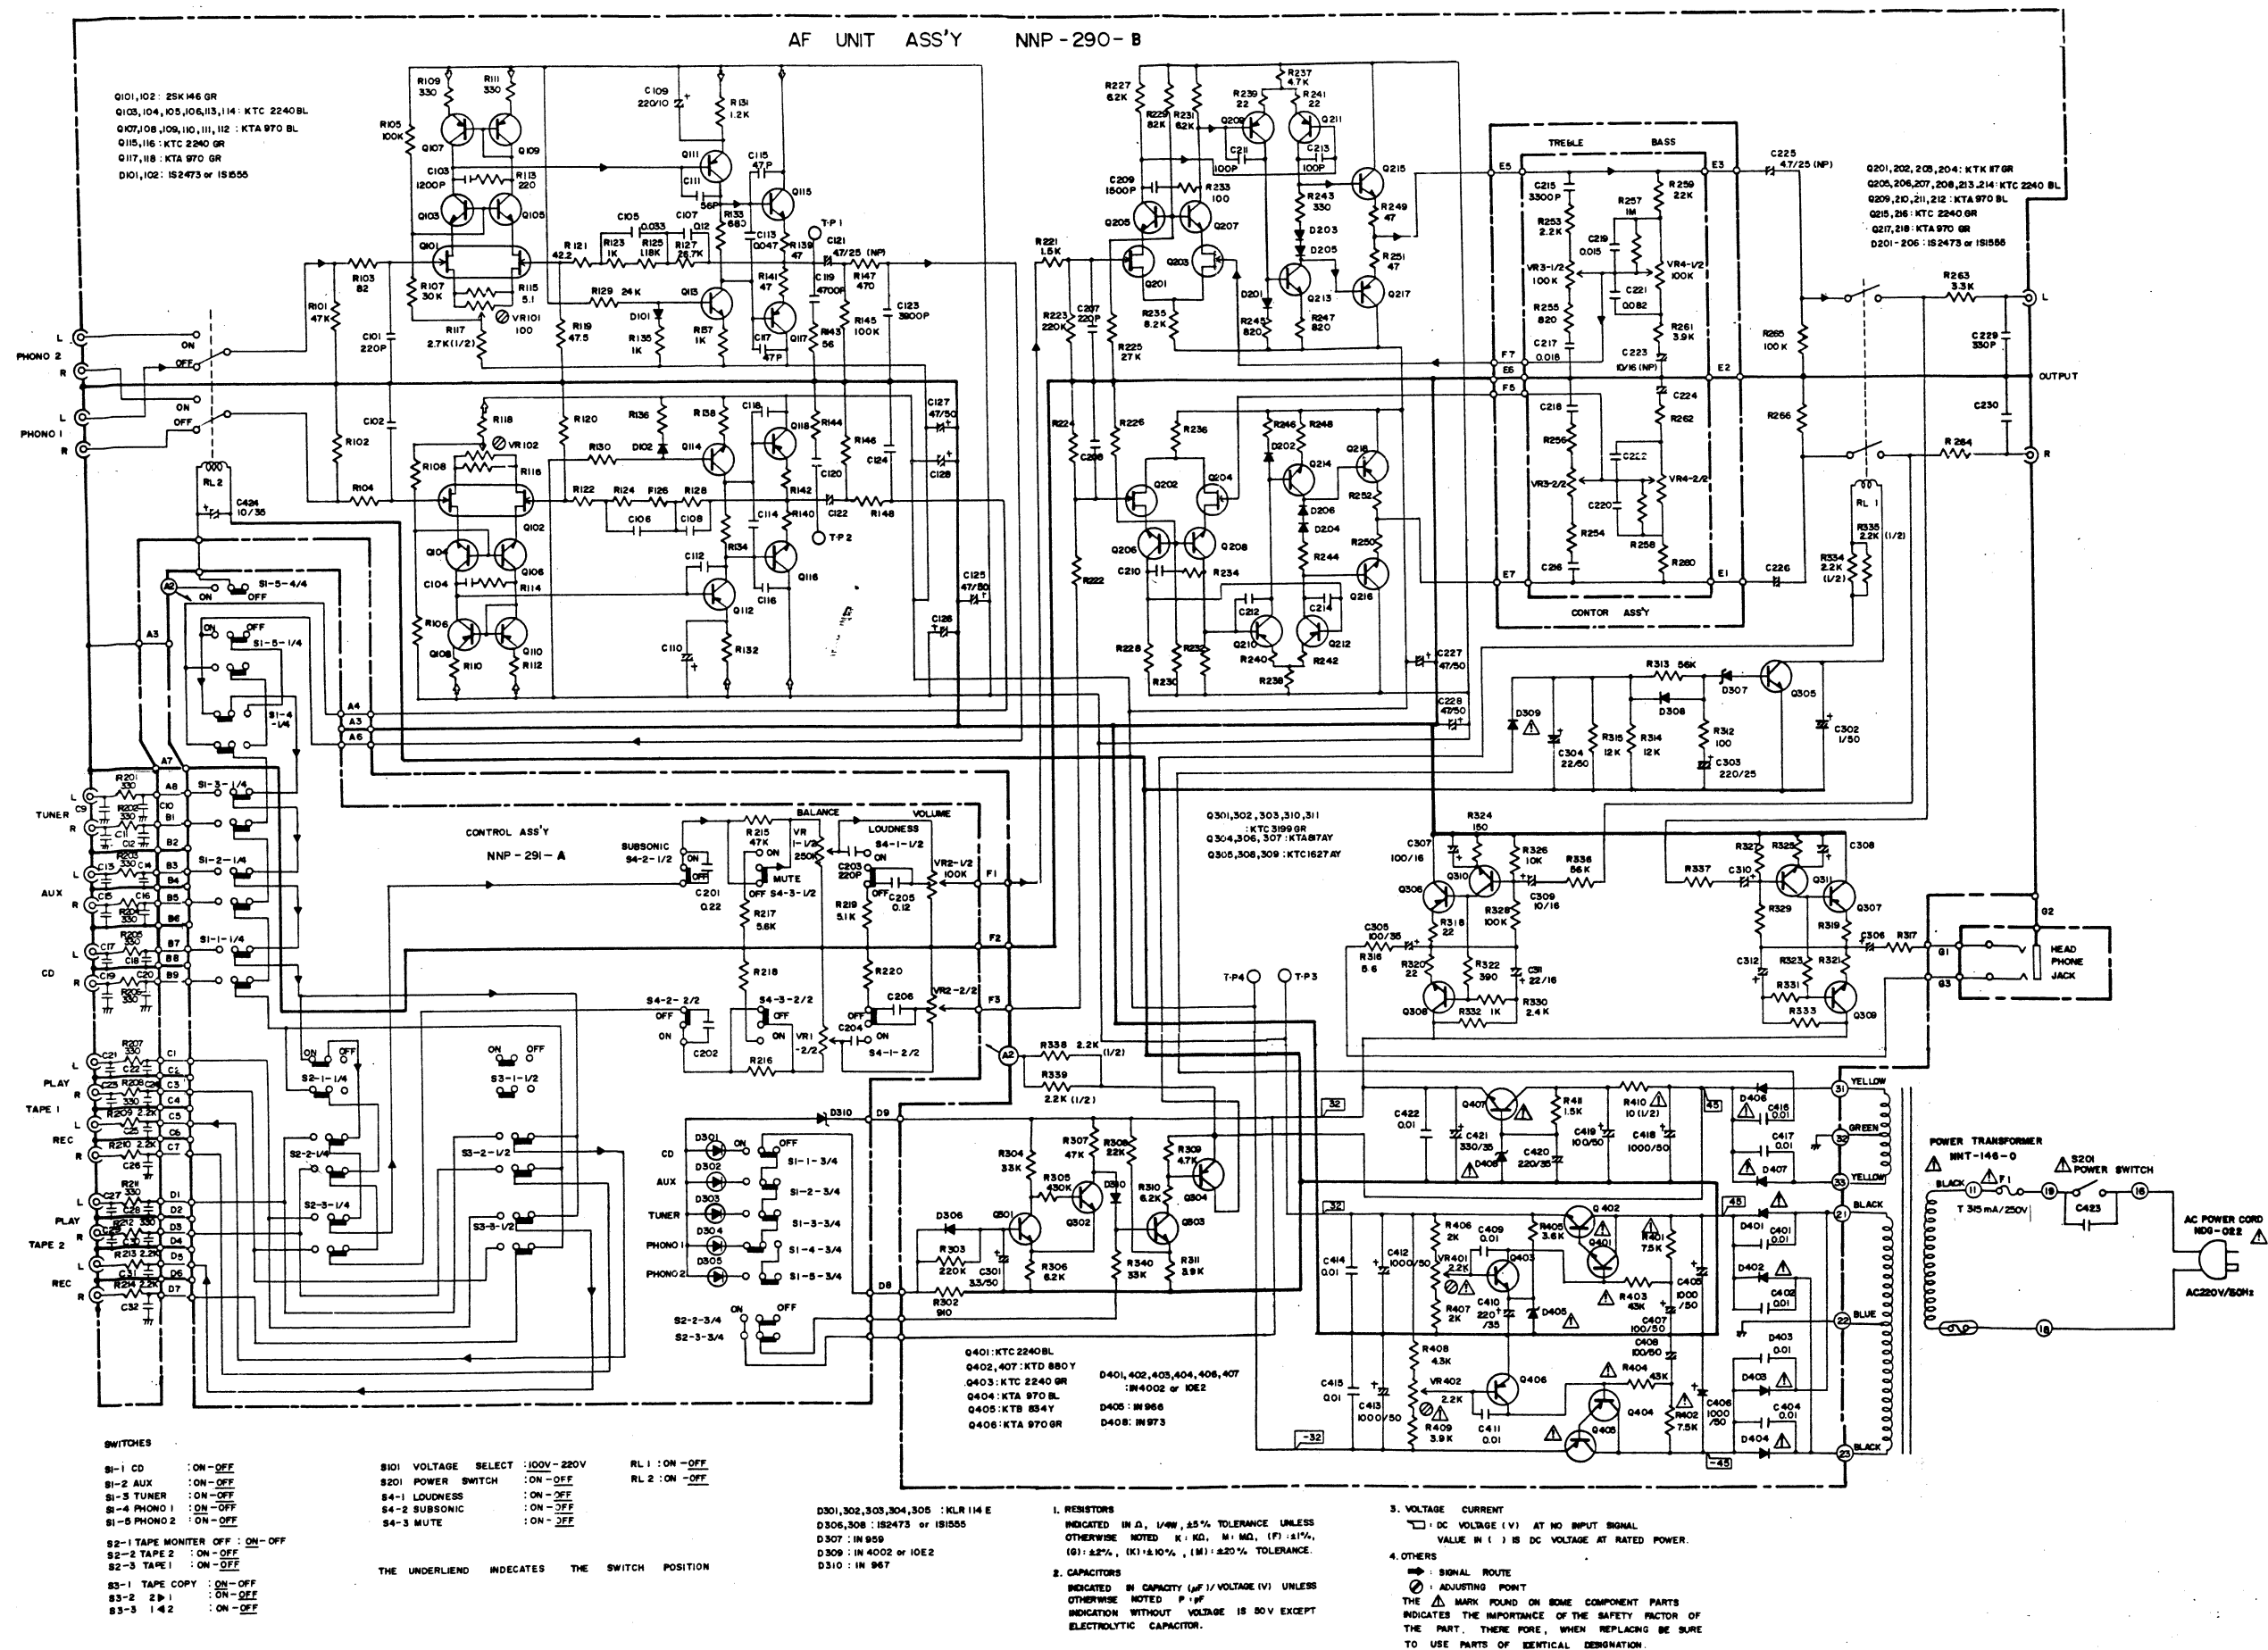

TOP VIEW OF P.C. BOARDS POINT-TO-POINT WIRING DIAGRAM

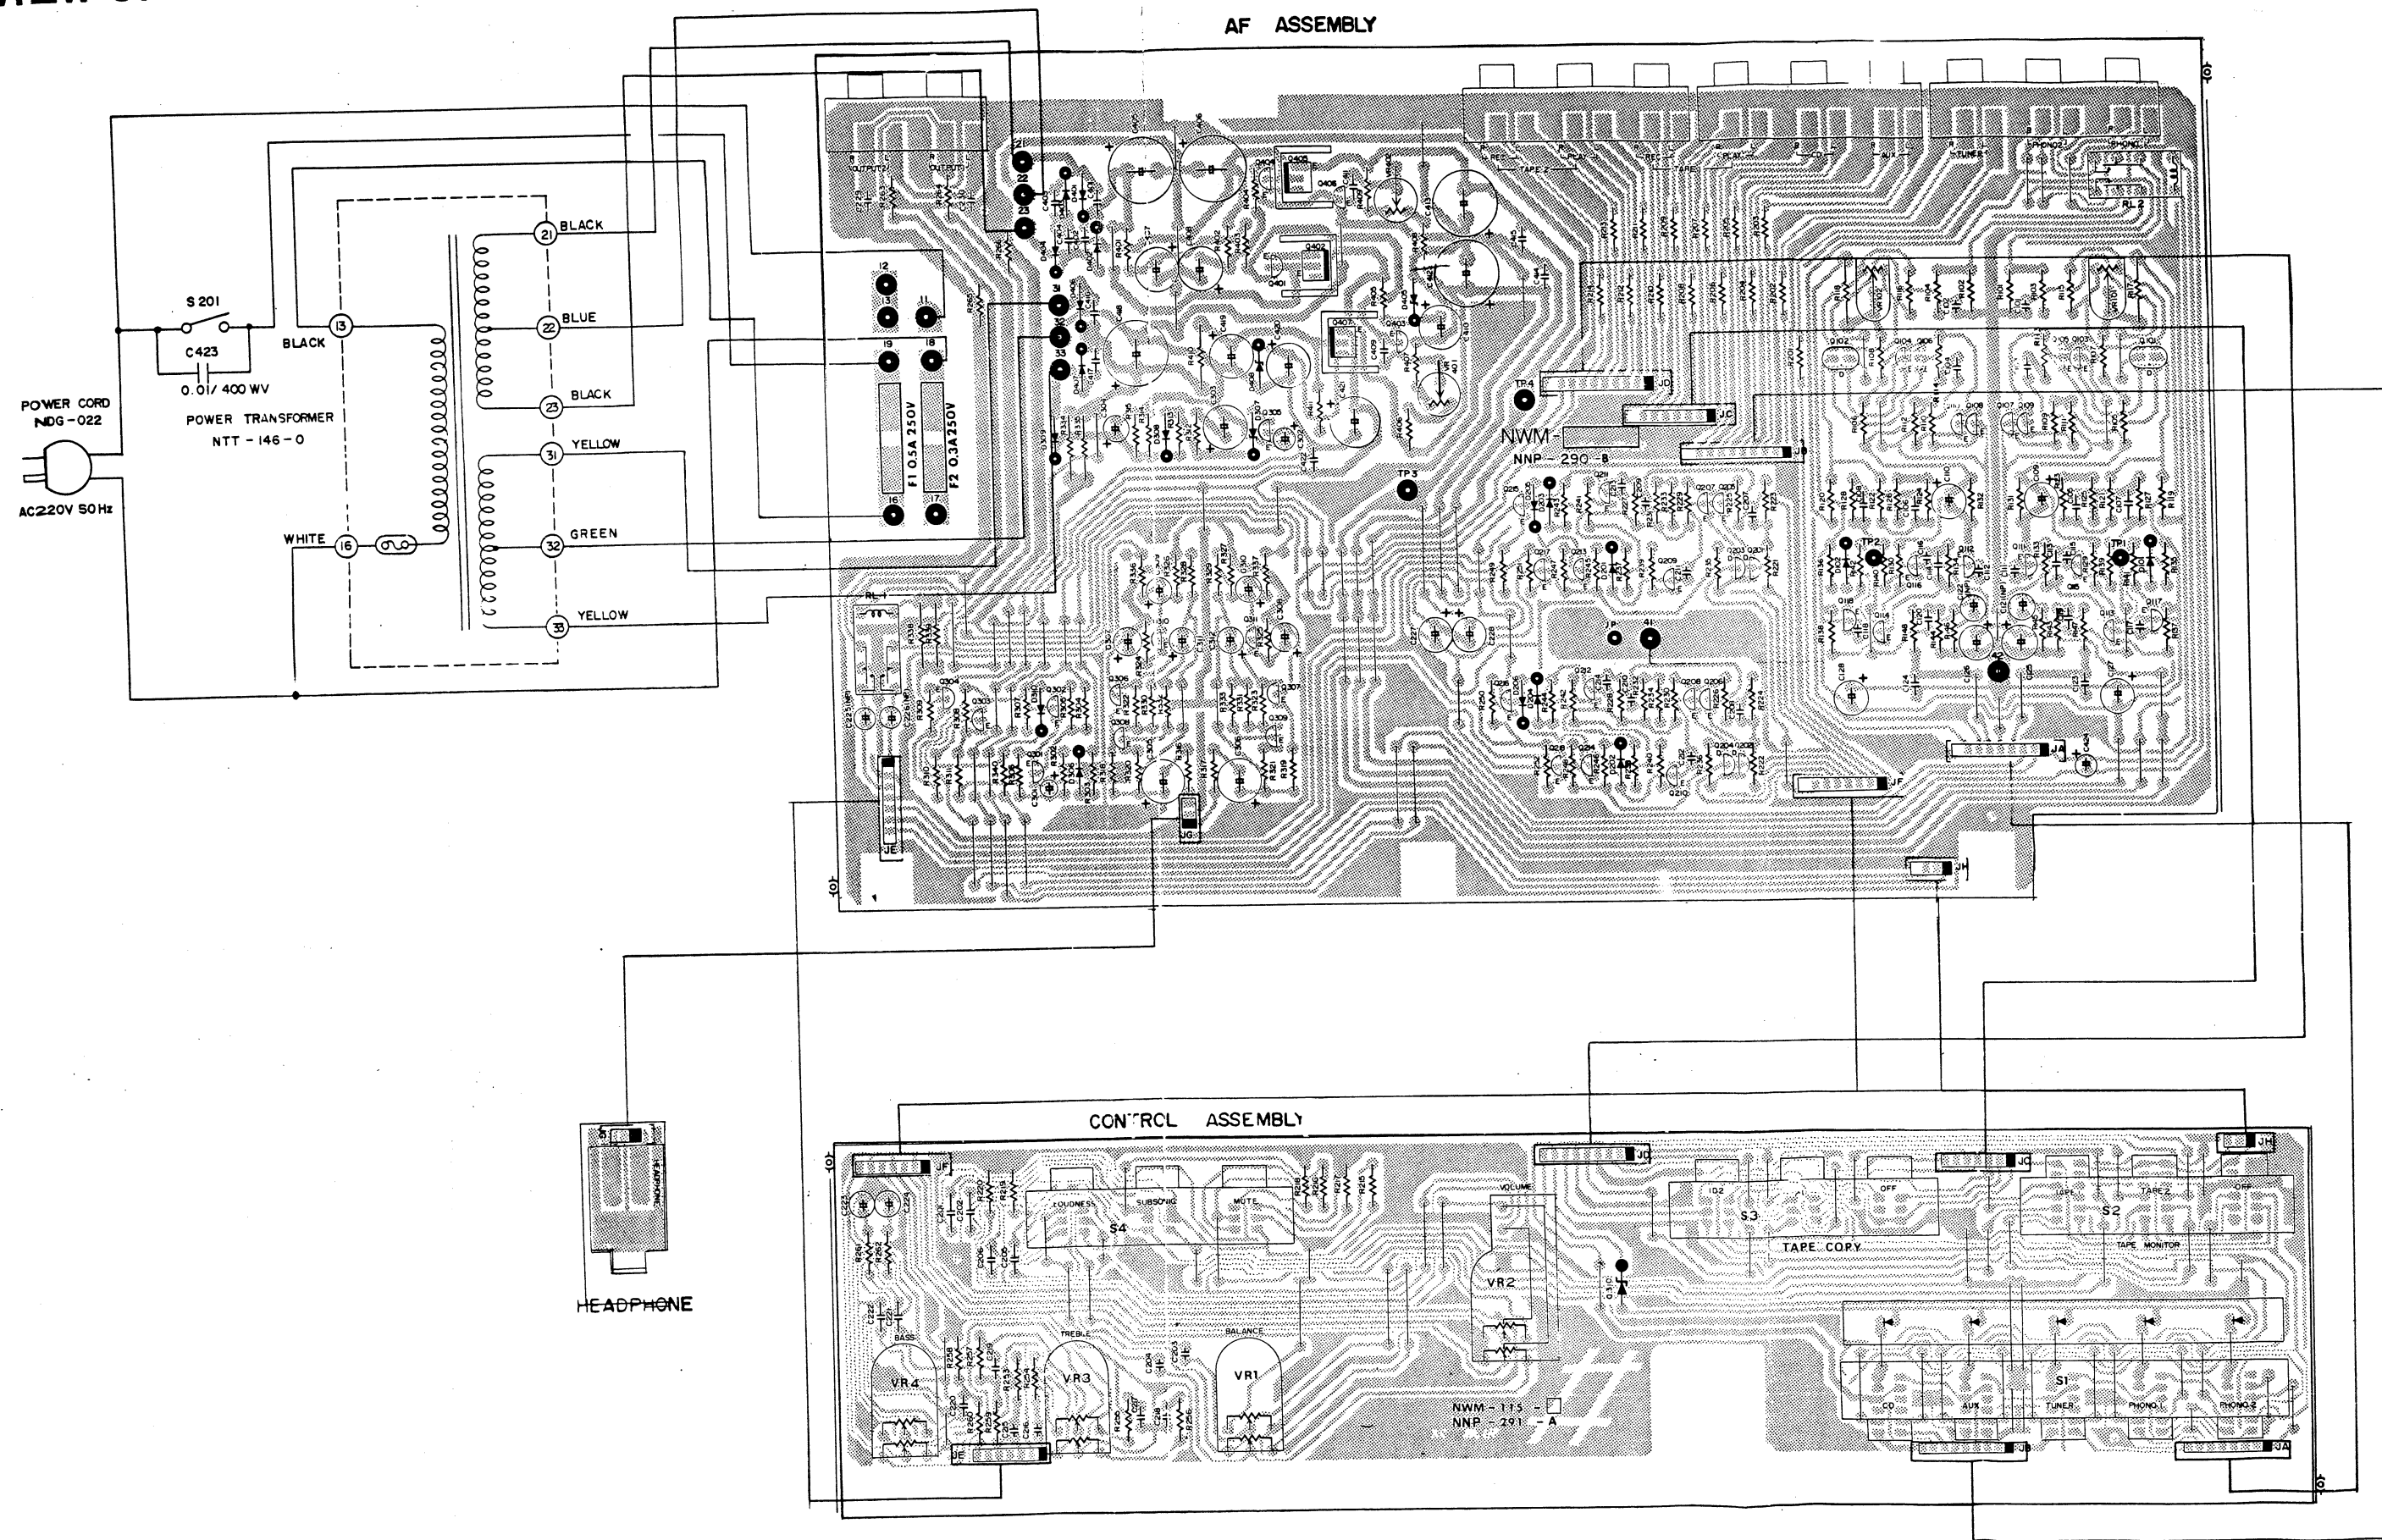

EXPLODED VIEW

